


Tom Sanders, W6QJI
Ed Bruette, N7NVP




### What is NVIS?


Cloud Warmer

# **Propagation Theory**

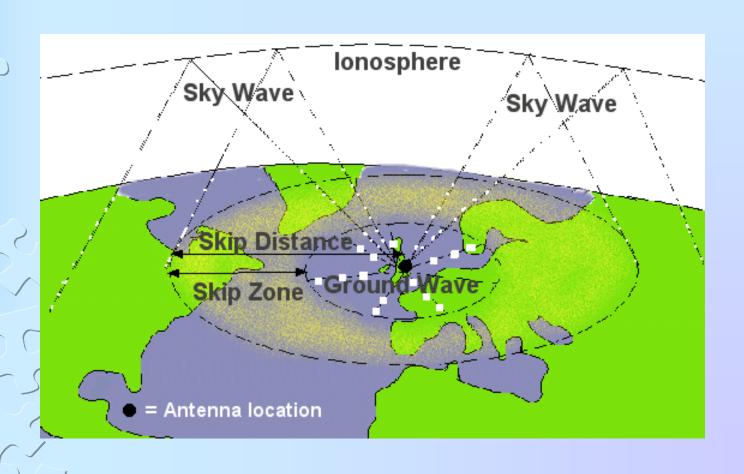


# **Propagation Theory**

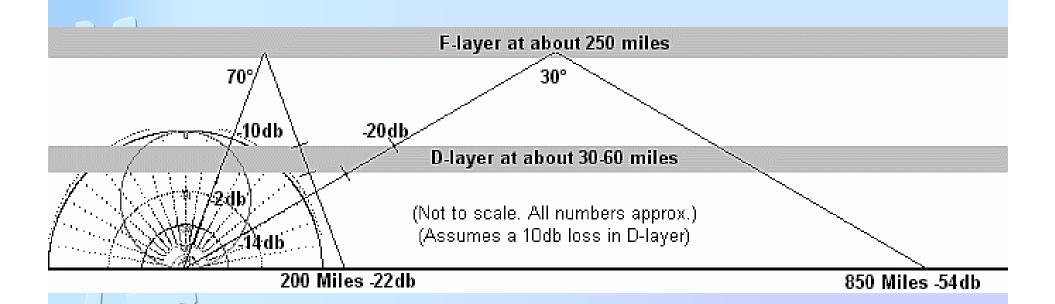

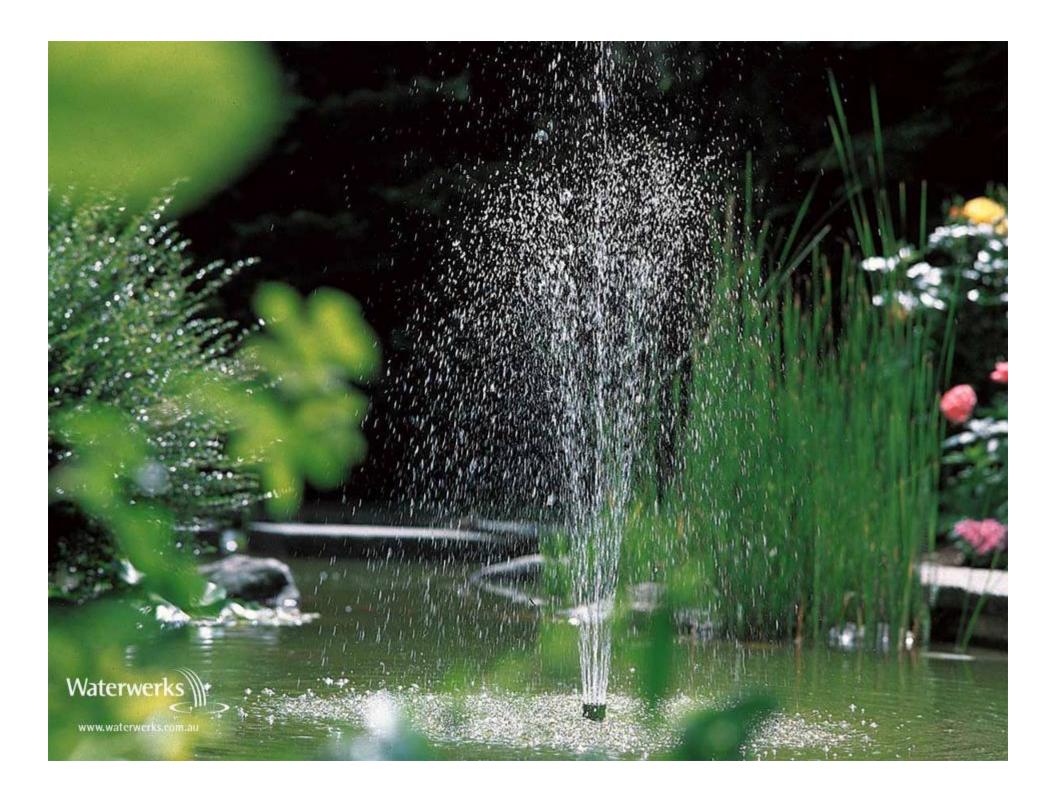



#### **NVIS Effect**

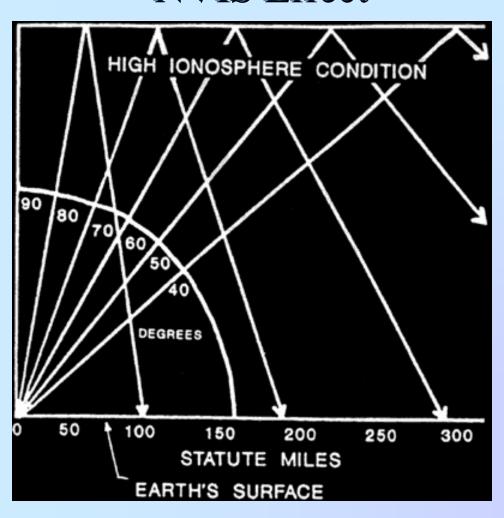





#### 300 Mile Coverage

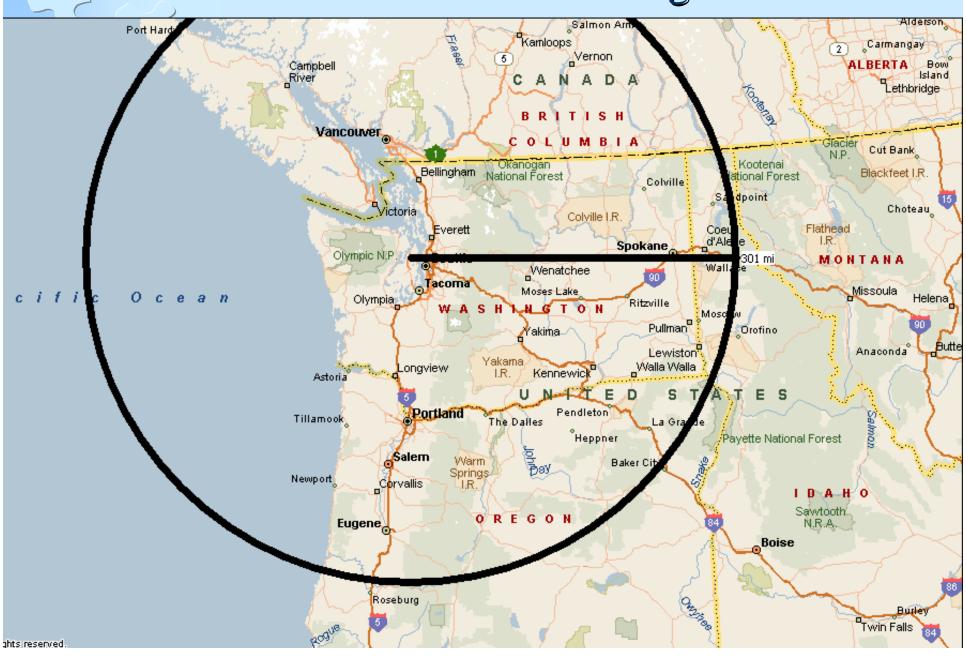


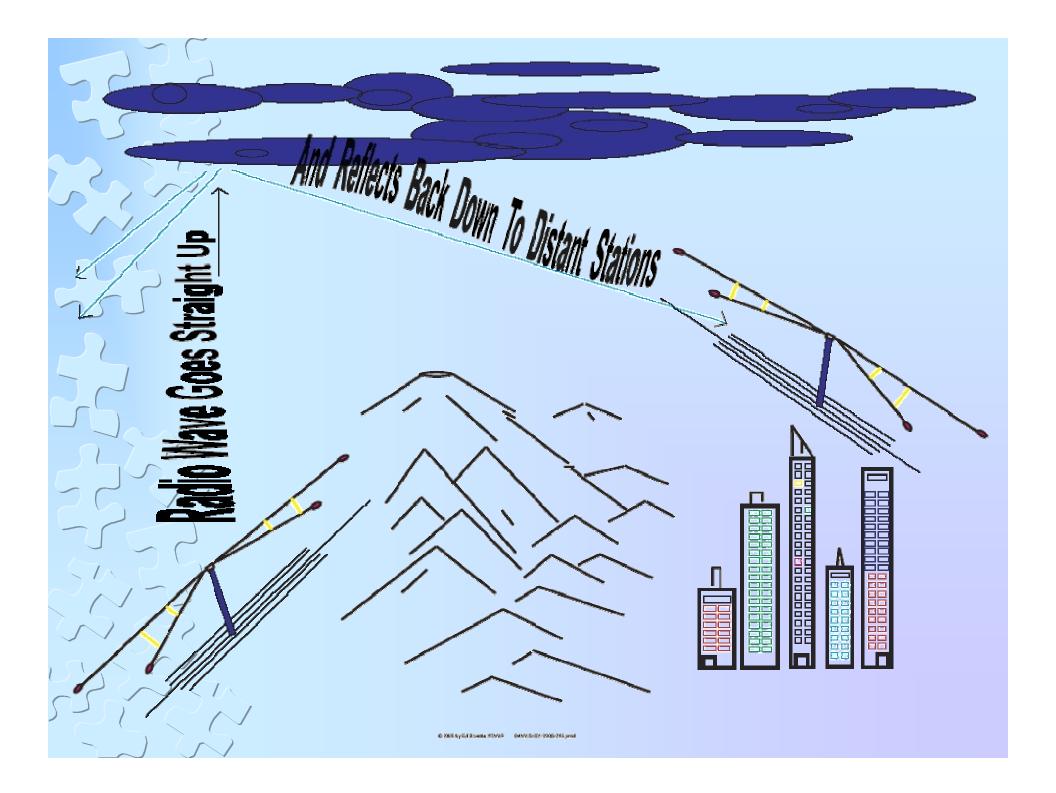




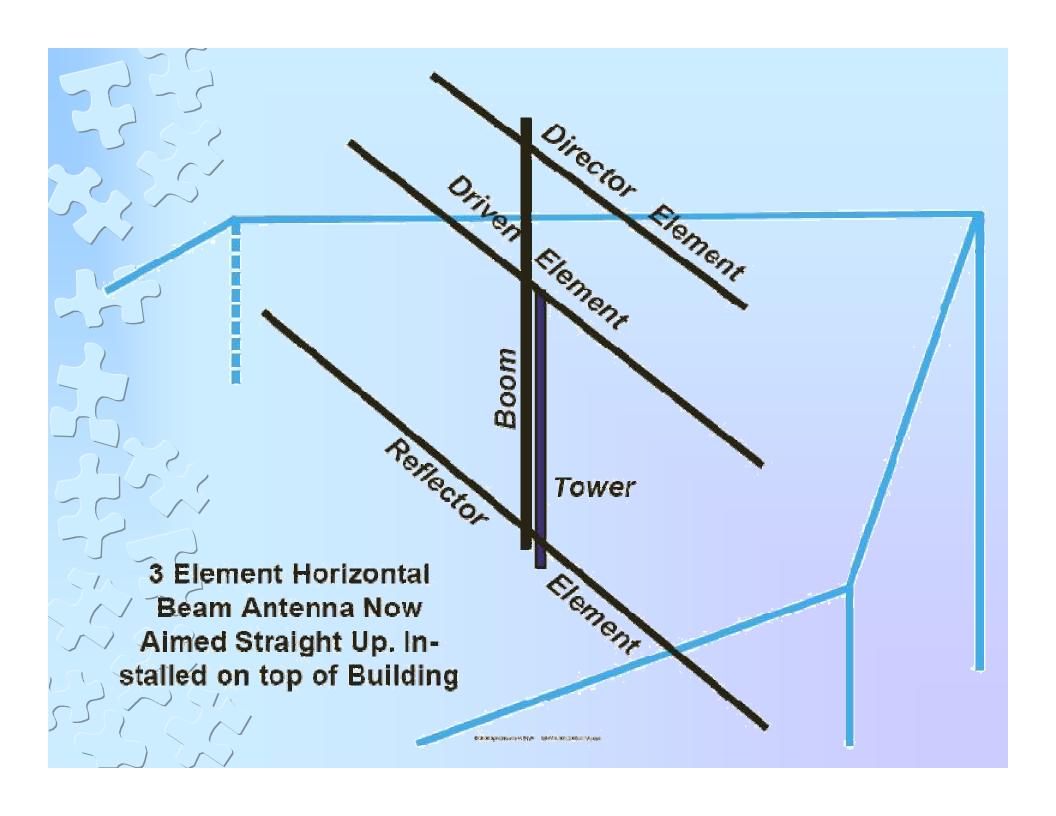


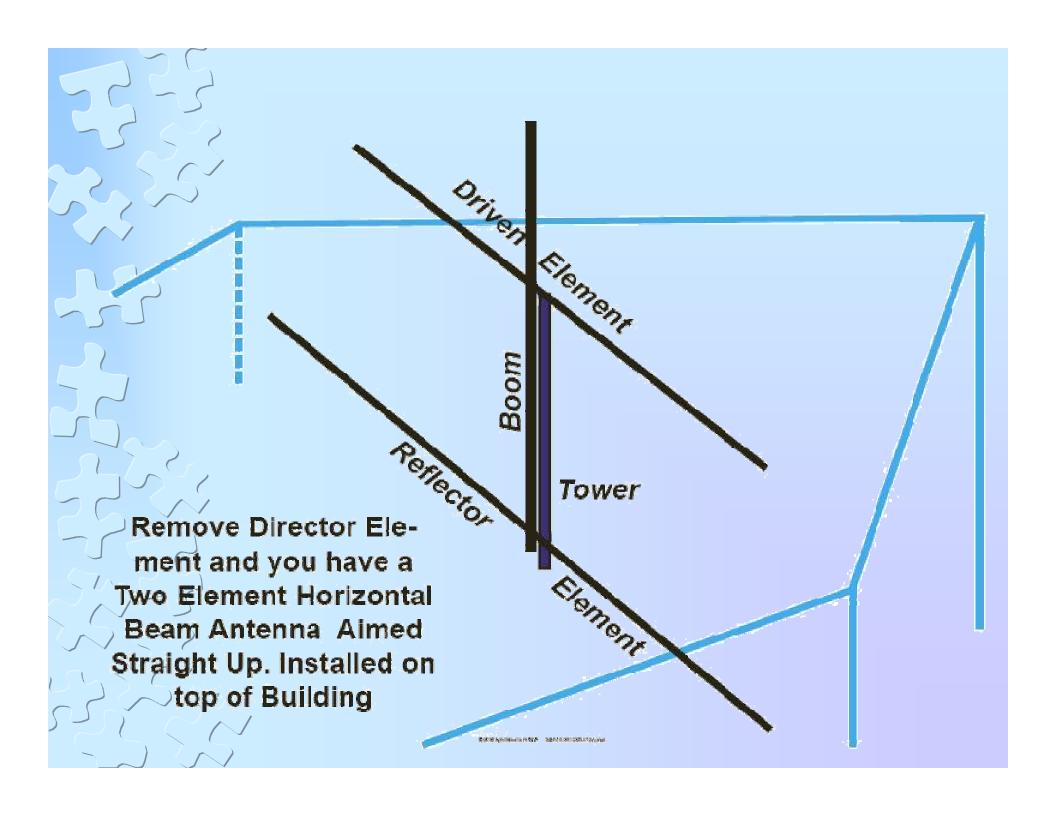


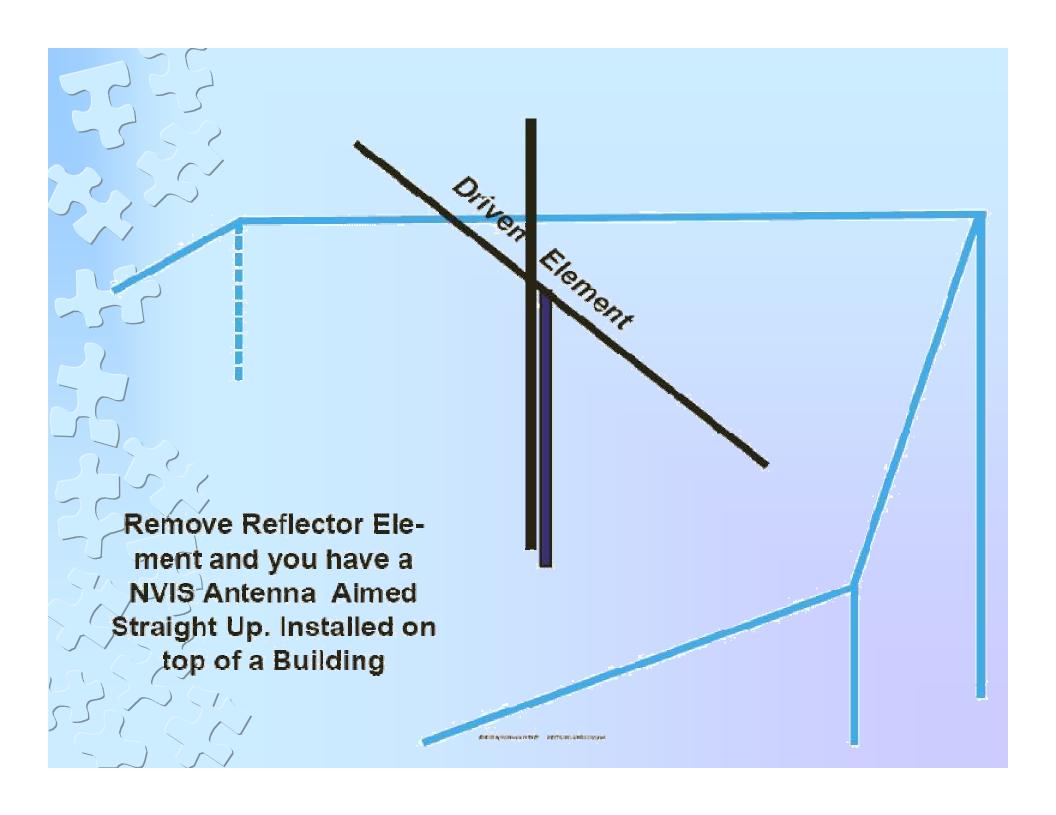


# **Propagation Considerations**

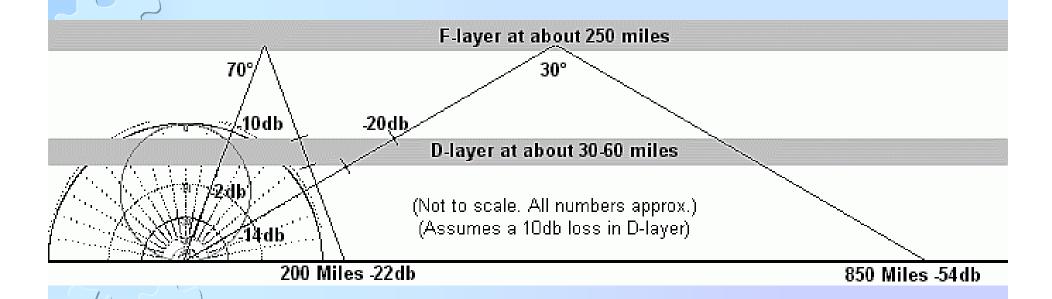

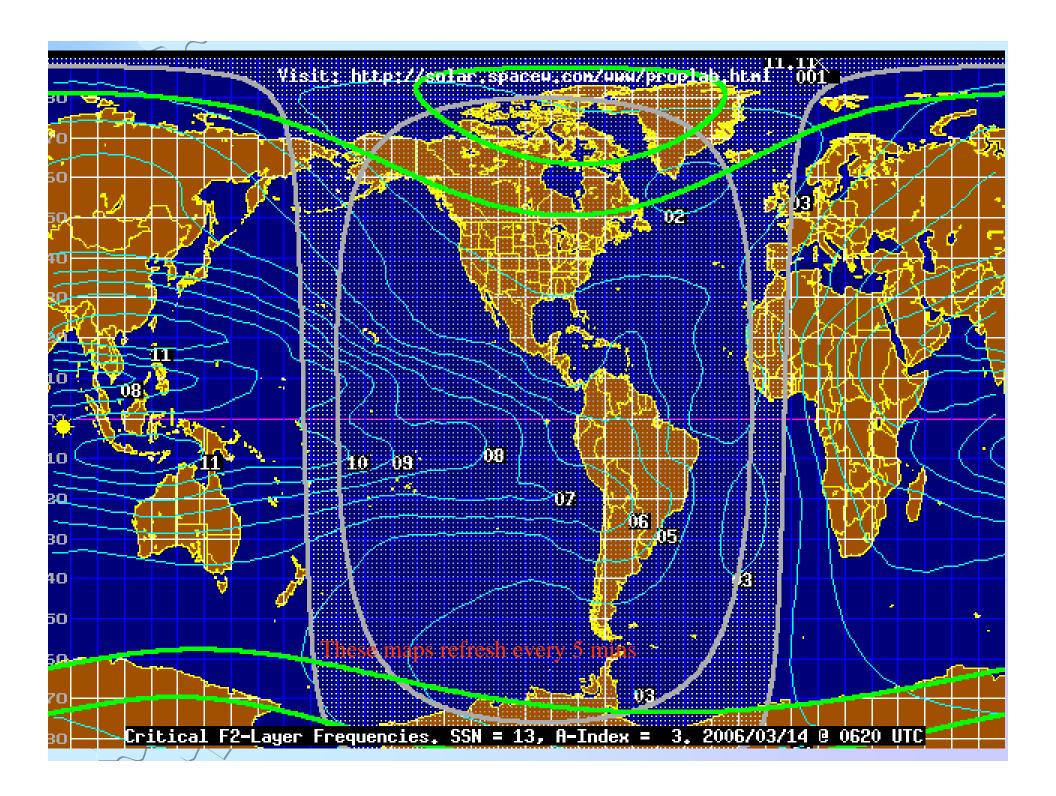

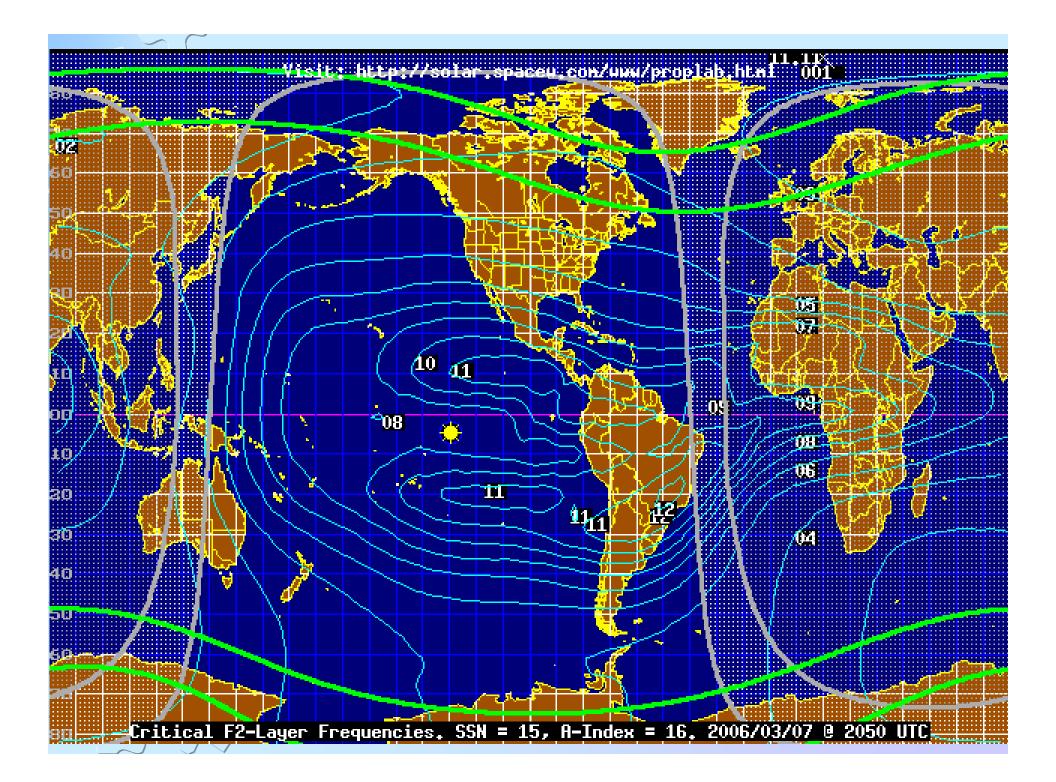

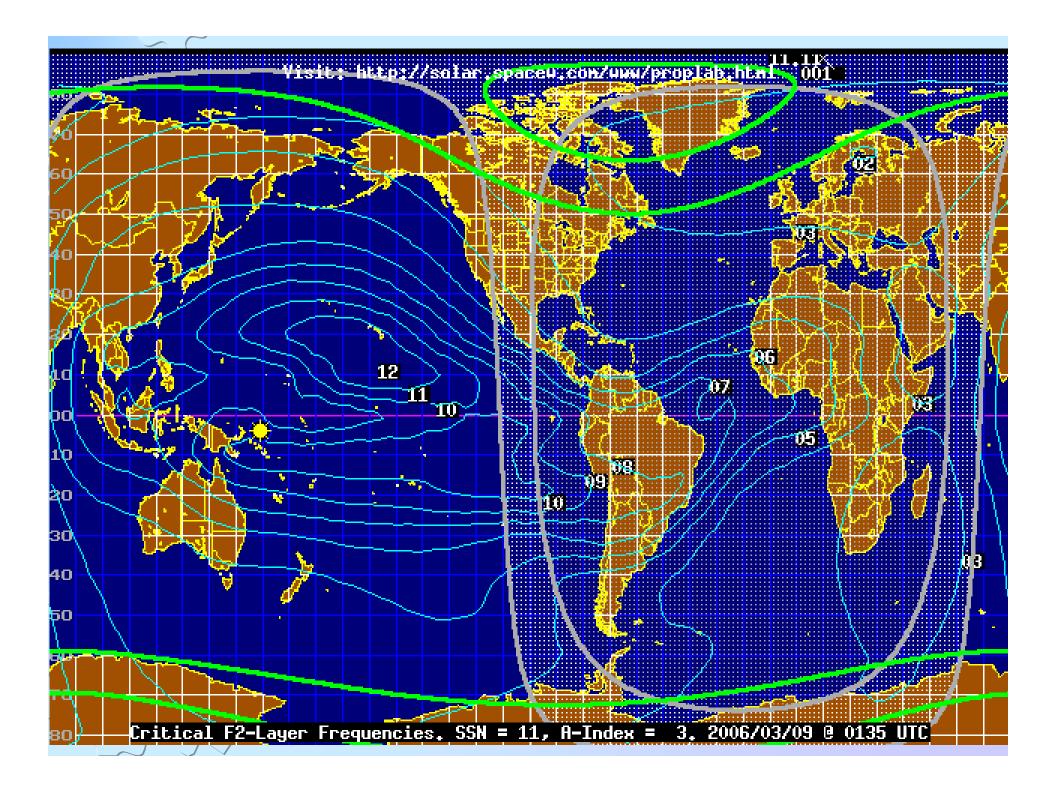


## 1 ATU

• Equals installation of NVIS antenna







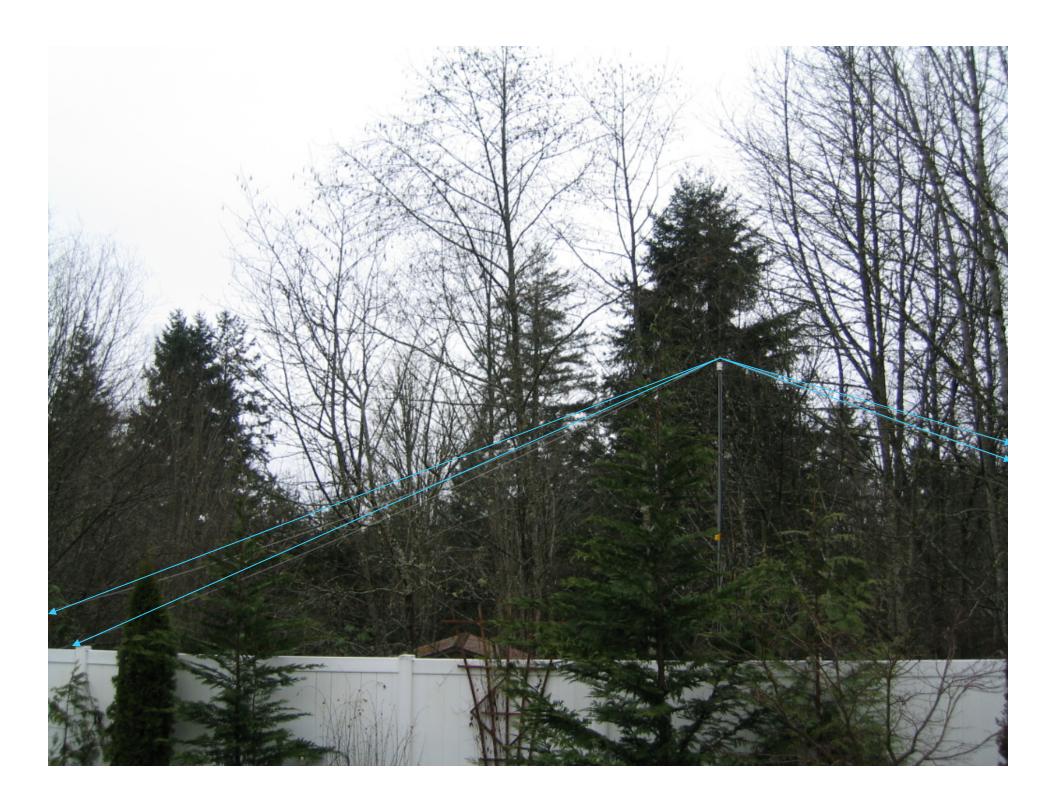






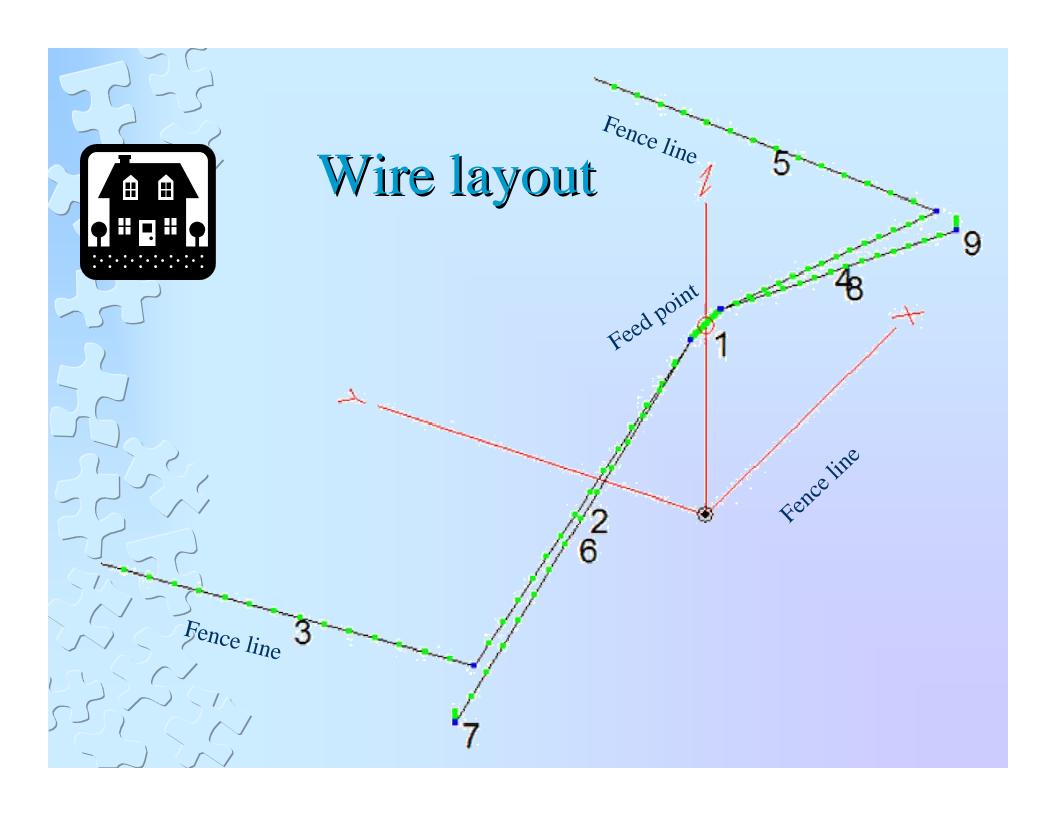

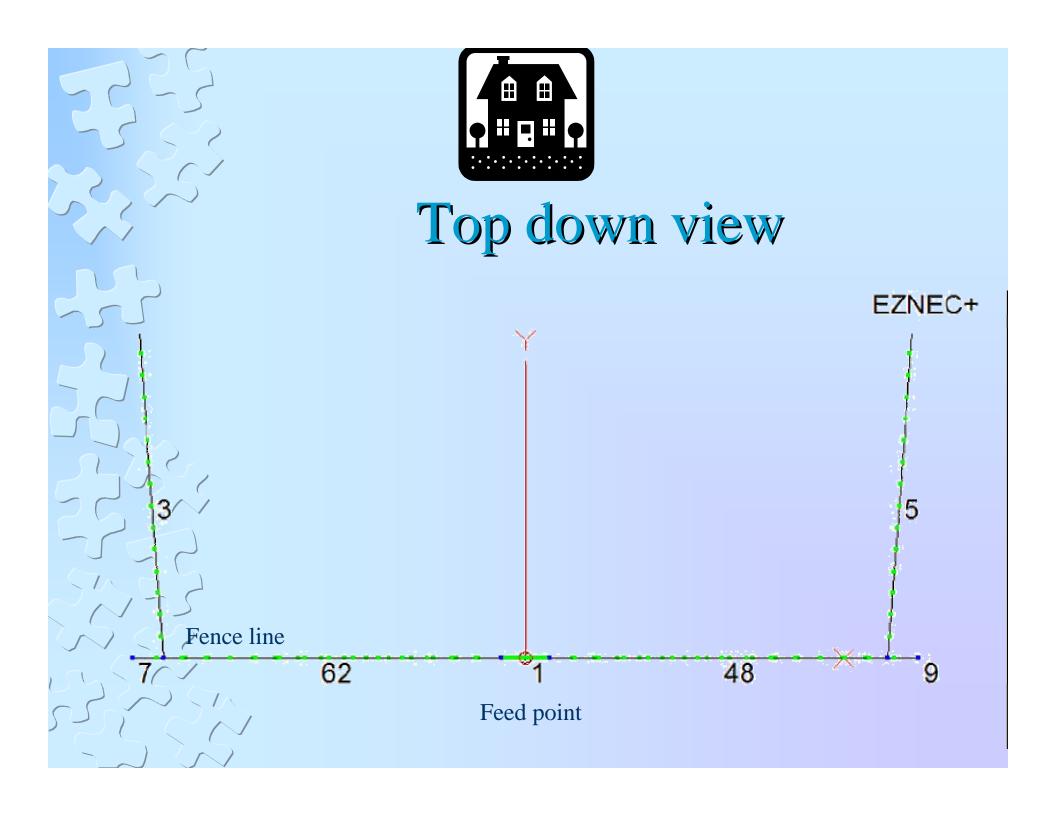

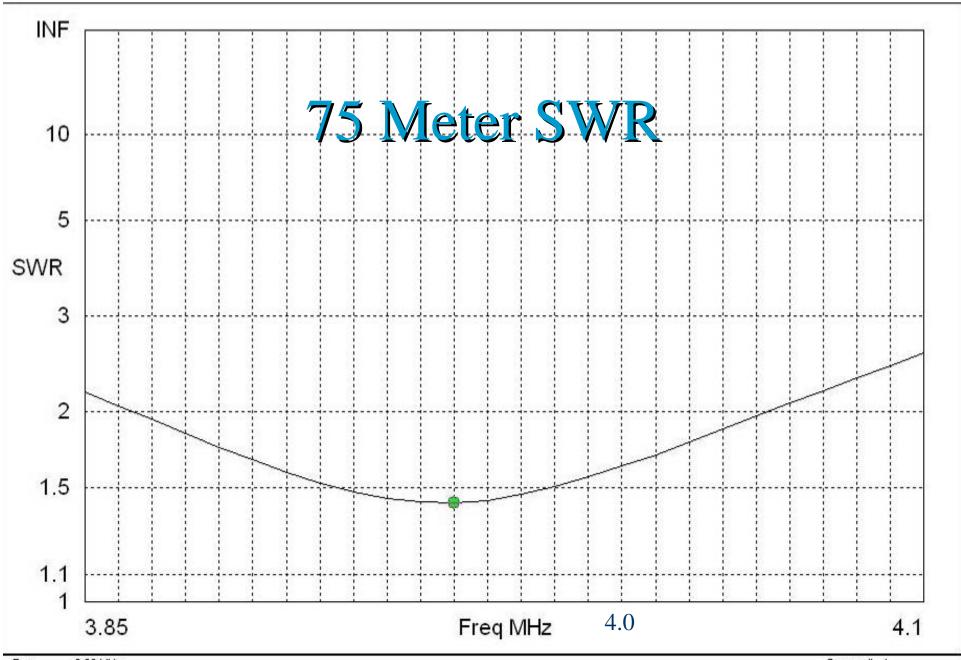


Freq 3.96 MHz SWR 1.42

Z 35.42 + j 2.23 ohms Refl Coeff 0.1726 at 169.81 deg. Source # 1

Z0 50 ohms

## Bandwidth 75 Meters

- 4050 2:1
- 3960 dip
- 3860 2:1

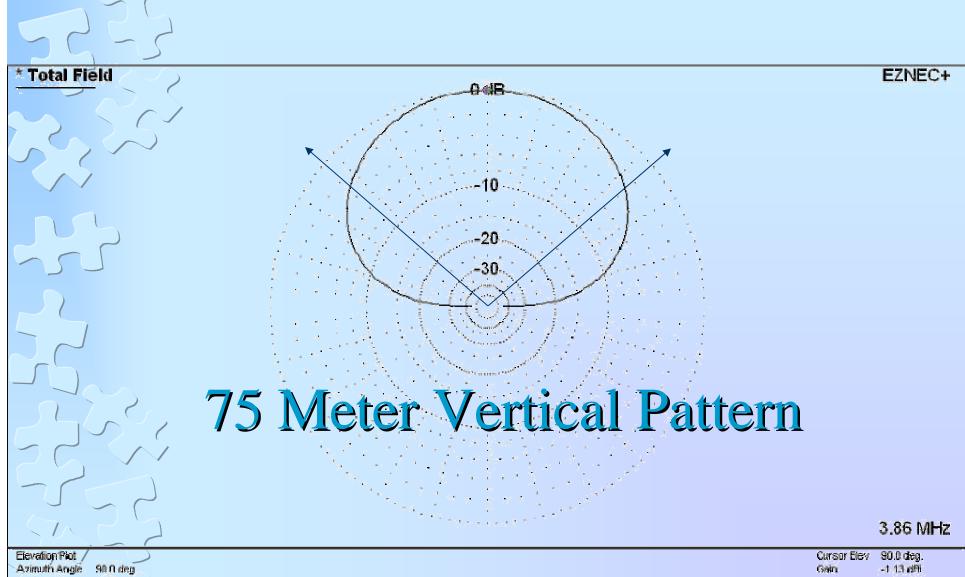



Outer-Ring -1.13 dBi

Slice Max Gain -1.13 off @ Elev Angle = 90.0 deg. Beamwidth 97.3 deg: \_3d8 @ 41.3, 138.6 deg

Sidelabe Gain <-100 dBi Front/Sidelohe > 100 dA

0.0 d@max

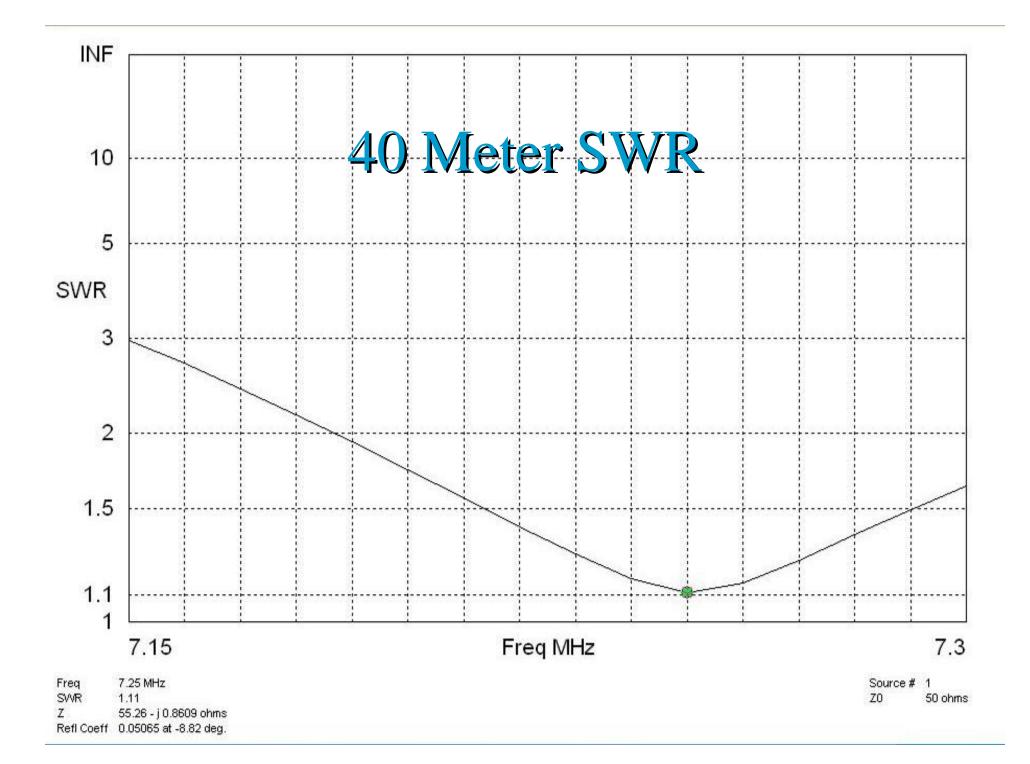


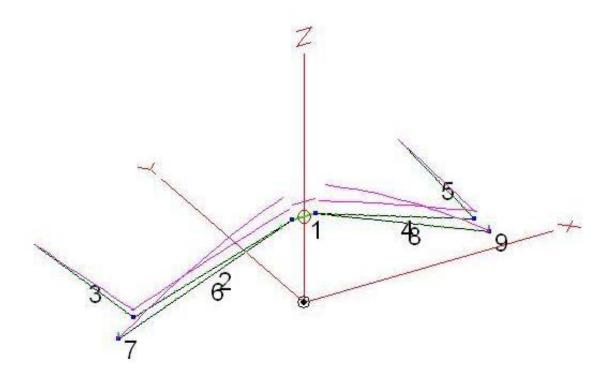


### 40 Meter Current Flow

## Bandwidth 40 Meters

- 7190 2:1
- 7250 dip
- 7370 2:1

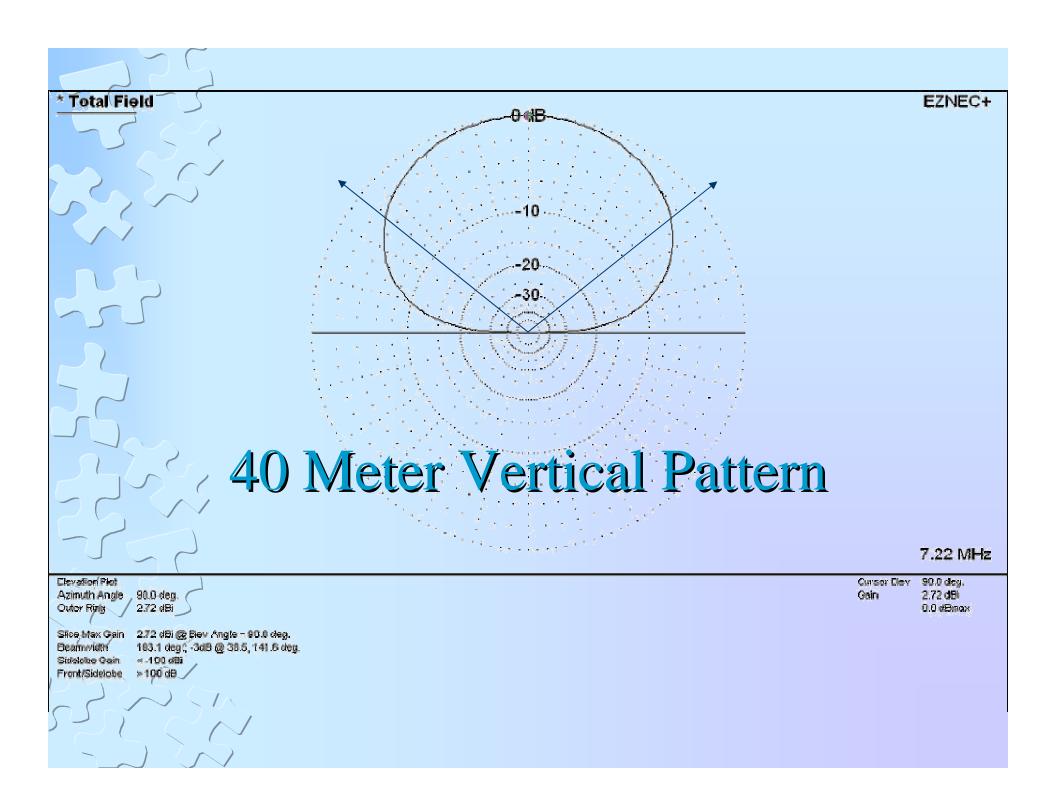

#### **Omni Pattern**

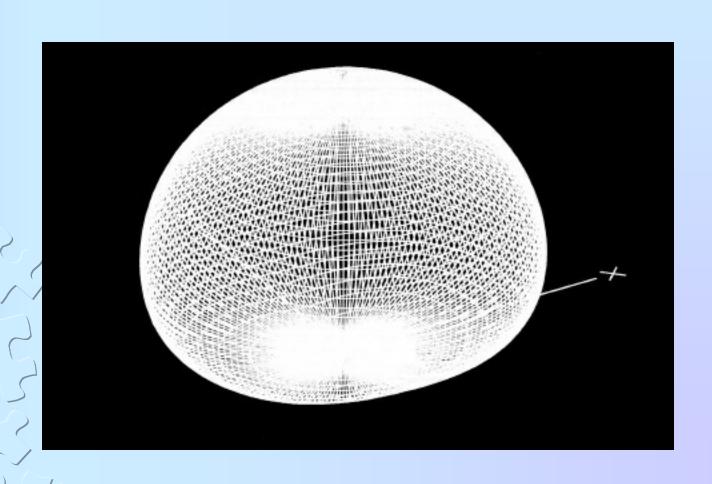

## Depth of Current Penetration

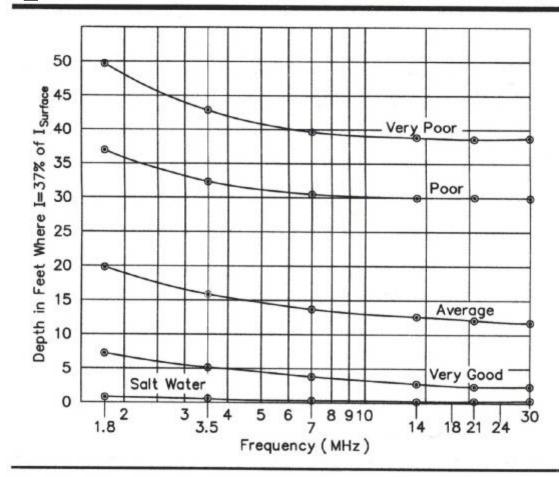


Fig 11—Depths at which the current density is 37% of that at the surface for different qualities of earth over the 1.8- to 30-MHz frequency range. The depth for fresh water, not plotted, is 156 feet and almost independent of frequency below 30 MHz. See text and Table 2 for ground constants.

## Feed Point Impedance vs. Height

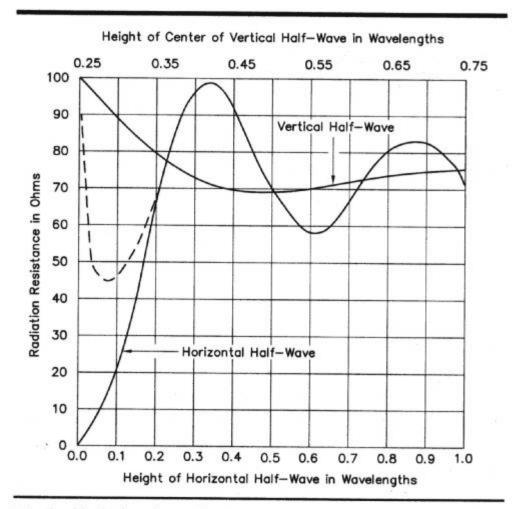


Fig 1—Variation in radiation resistance of vertical and horizontal half-wave antennas at various heights above flat ground. Solid lines are for perfectly conducting ground; the broken line is the radiation resistance of horizontal half-wave antennas at low heights over real ground.

# How It Went Together

- Materials
- Construction
- Modifications

### **Parts List**

- 1 Center insulator
- 1 1.5" PVC Slip coupler
- 2 or 3 Hose clamps
- 14 ga. Insulated wire
- ?• 1 10' TV mast
  - 1 5' TV mast
    - Tie wraps as desired
    - 1 Fence stake
    - Coax to the shack









## **Element Lengths**

- 75 Mtr legs = 57 ft
- 40 Mtr legs = 39 ft

Prune these lengths to meet your ground conditions

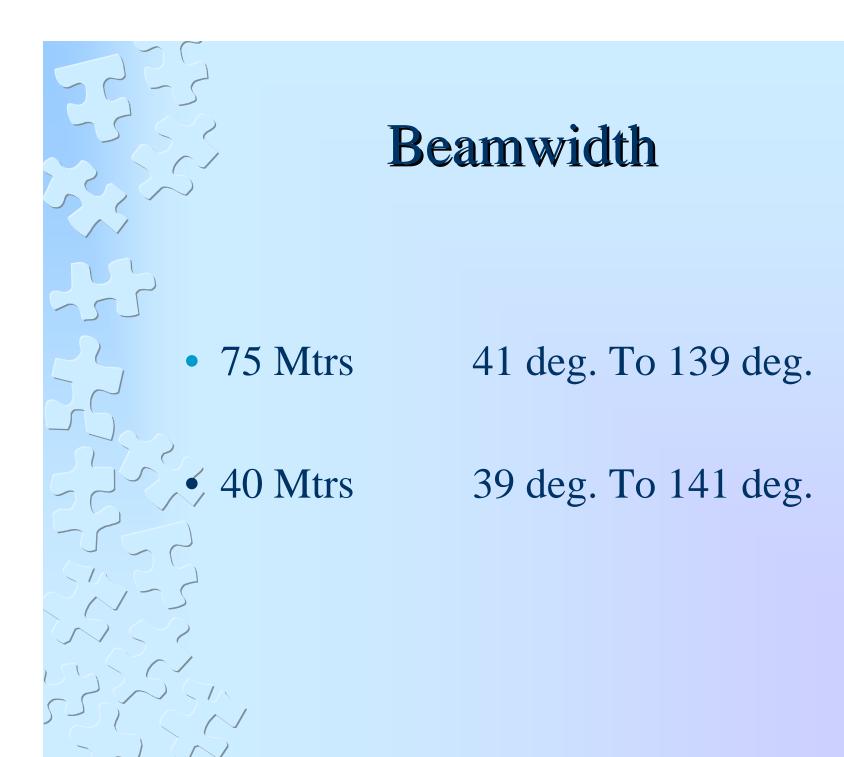

### Night Time Ionosphere (300 mi.)

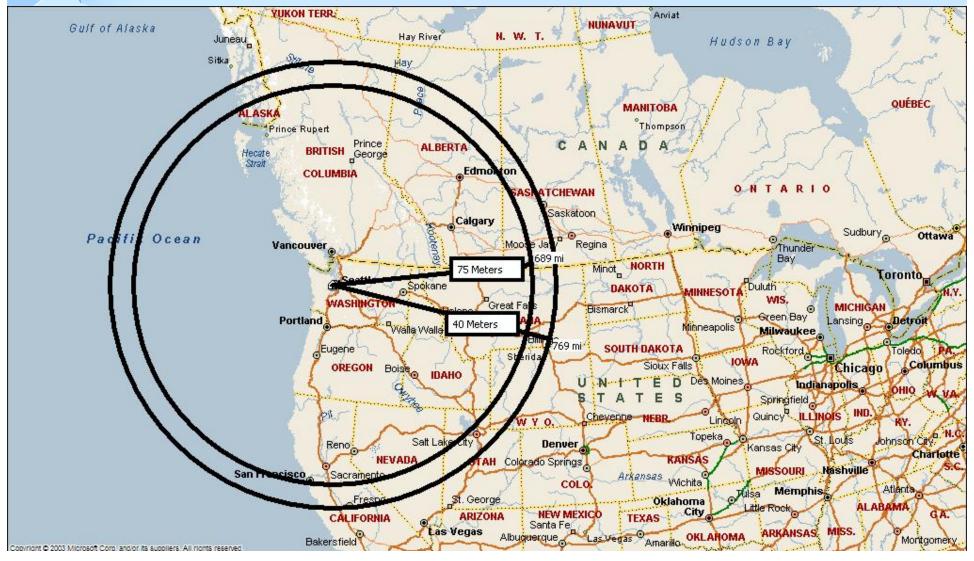

## Hints & tips

- Solder wires at the feed point
- Solder feed point pigtail to all other wires
  - Coax should be perpendicular to the antenna



## Hints & tips (cont.)


- Ground conditions will drive element lengths
- Wet vs.. dry
- Use an antenna analyzer!!!
- Tune 75M first, then 40M
- Minimize the catenaries in the wires but not too tight the wire will stretch
- Maintain the spacing between the 75 & 40M elements


# Too big?

If that doesn't work for you, try this


### 40M wire Tunable on 75M


**EZNEC+** 

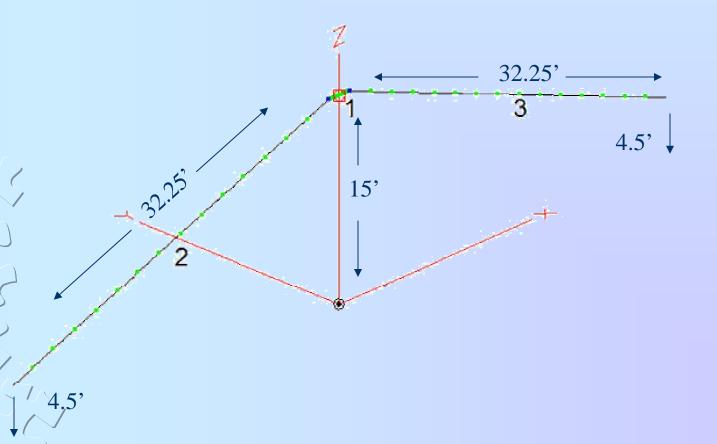

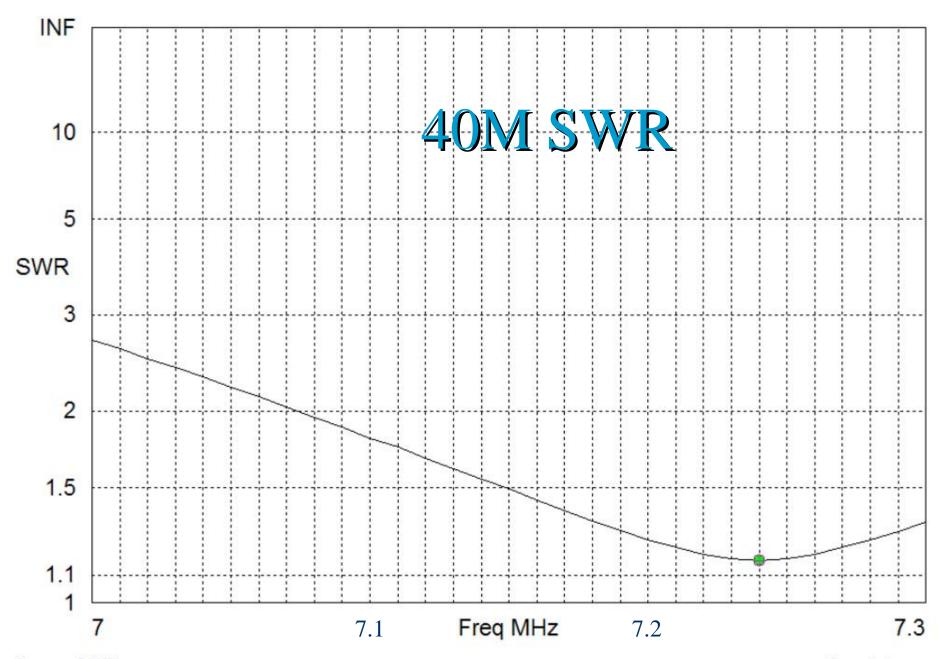


Freq 7.24 MHz SWR 1.16 Z 57.88 - j 0.5715 ohms Refl Coeff 0.07322 at -3.85 deg. Source # 1 Z0 50 ohms

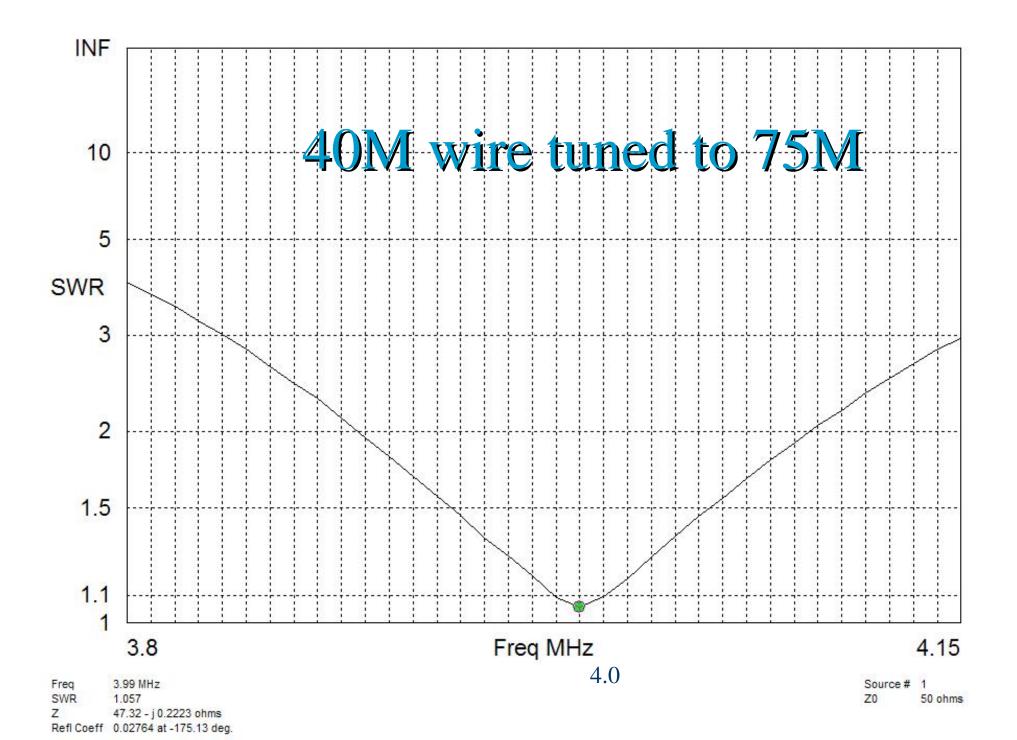

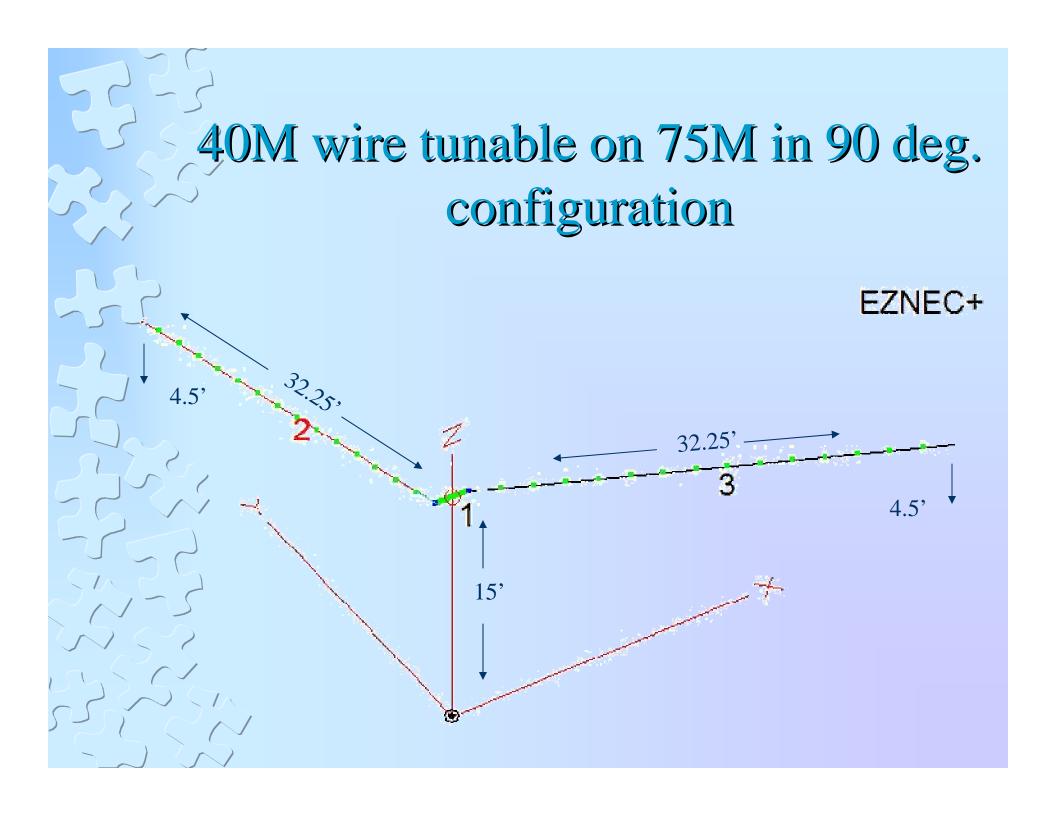


# Buddipole

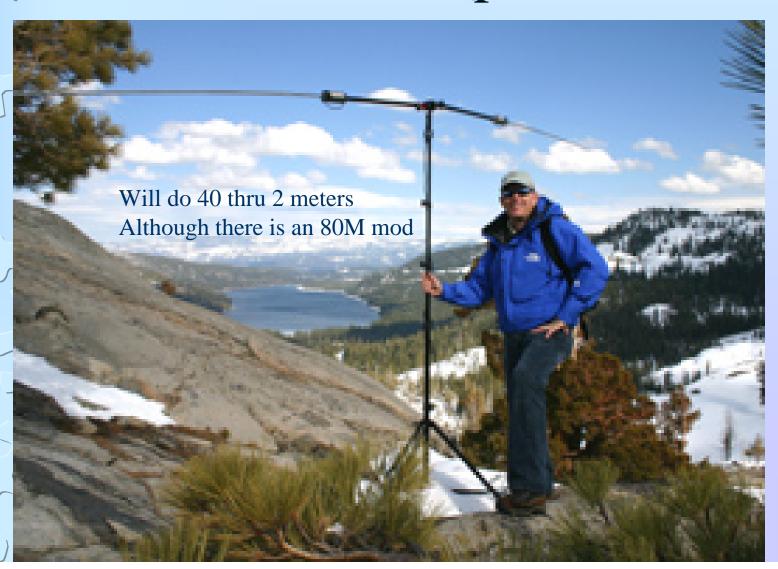

# Maximizing the Received Signal



Robert

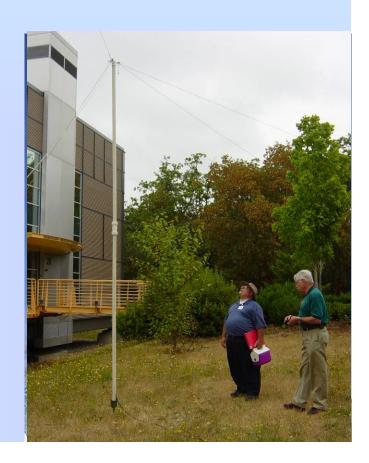

## Thanks to Bill Balzarini, KL7BB

for all the drawings!





- Contact Tom at tjsand@wavecable.com
- Contact Ed at n7nvp@arrl.org

## Thank you!

de Ed & Tom